




DK 80 Hammer Series

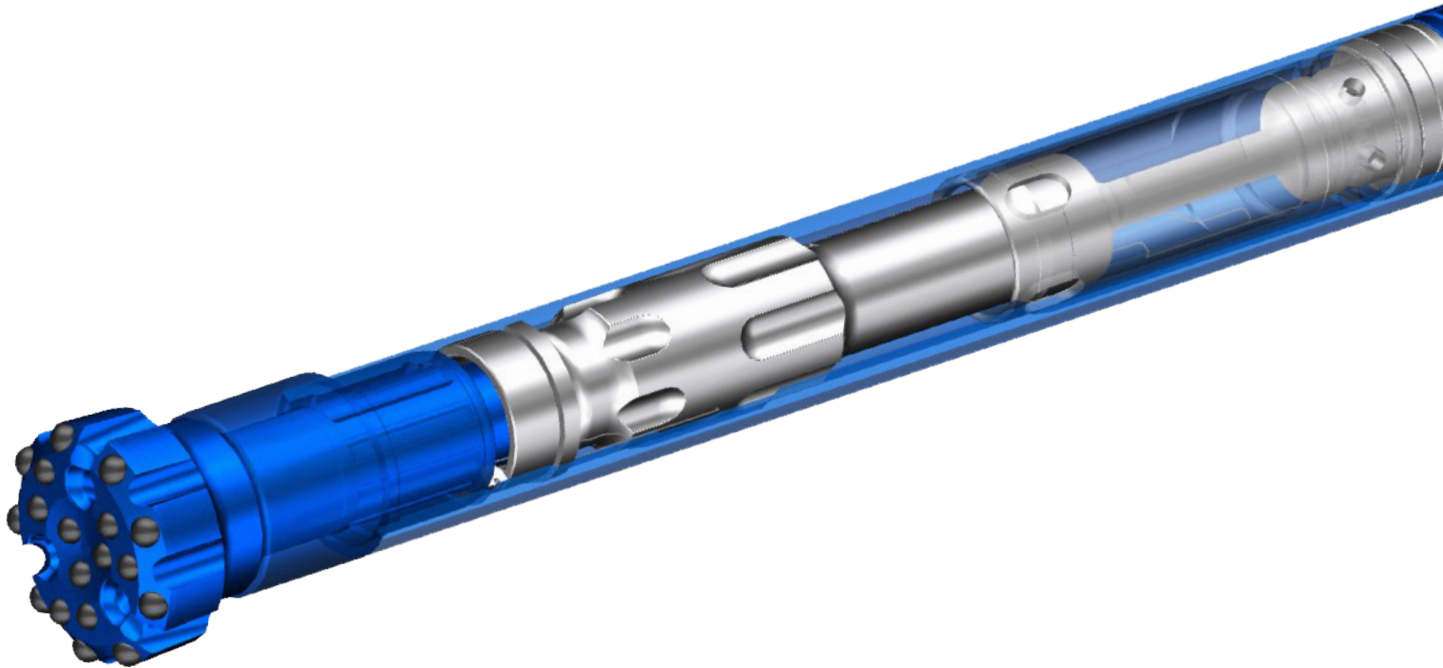

Technical Manual

820 South Sixth Ave
Mansfield, Tx 76063, USA.

Web: drillking.com / Email: sales@drillking.com

Table of Content

Introduction	2
DK 80 Hammer Introduction	3
Safety Recommendation & Precautions	4
Hammer View and Parts List	6
Bit Shank DHD380	6
Bit Shank QL80	7
Bit Shank SD8	8
Clamping Locations	9
DK 80 Hammer Air Consumption at Different Working Pressure	10
DK 80 Hammer Assembly	10
Assembly with Shank type QL80 & DHD380	11
Assembly with Bit	15
Assembly with Shank type SD8	16
Assembly with Bit	17
Lubrication	18
Storage	18
Warranty	19

Introduction

Drill King International was founded back in 2004 by Randy Broseh in Arlington, Texas. A year later, the business turned into a real family affair when brother Larry Broseh acquired the business. The brothers used their extensive industry knowledge to create a unique company with the best customer service in mind.

Continued growth and customer demand saw Drill King in 2008 decide to build a 60,000 sq.ft (5,575 sq.m) facility in Mansfield Texas. From this point the company has gone from strength to strength creating innovative drilling tools and solutions for a variety of customer projects around the globe.



DK 80 Hammer Introduction

The DK Hammer Series is designed to operate efficiently on air pressure. Compressed air is directed to the hammer via the rotation spindle and drill pipe. Exhaust air from the hammer is passed through blowholes in the drill bit and is used to flush clean the drilled hole. Rotation is provided by a rotation unit on the drill rig and transferred to the hammer via the drill pipe.

The drill pipe is threaded so that the drill string can be extended as drilling advances and the hole becomes deeper. Feed force is also transmitted to the hammer via the hole down unit and the weight of the drill pipe.

The DK Hammer Series was developed after much research by utilizing the newest technologies available. The DK Hammer Series is designed to be used in a wide range of application in rock conditions.

- Innovative & simple design for easy eco kit maintenance
- High frequency design for fastest penetration rates
- Available for common bits shanks IR/QL/SD
- Customizable options for open hole or cased hole projects
- Premium alloys & treatment used for longer lasting tools

Safety Recommendation & Precautions

The safety Recommendations listed below are intended to alert the hammer operators and maintenance personnel to the possible physical dangers inherent in the various phases of operating and maintaining equipment of this kind.

We recommend that all operators and maintenance personnel read and thoroughly understand the safety precautions before attempting to operate or perform maintenance on the drilling equipment. We put **“SAFETY FIRST”** and suggest this must always be the primary consideration of all personnel while operating or maintaining the equipment.

Since the Safety Recommendations can't cover every potential situation, it is suggested that everyone exercises good judgment and common sense while operating, servicing, or working near the equipment.

NOTE:

SAFETY STATEMENTS ARE INCLUDED THROUGHOUT THE MANUAL WHERE IT MAY APPLY SPECIFICALLY TO INDIVIDUAL COMPONENTS OR ASSEMBLIES. FAILURE TO COMPLY WITH SAFETY WARNING CAN RESULT IN SERIOUS OR FATAL INJURY. IMPROPER OPERATION AND MAINTENANCE CAN CASUE SEVERE EQUIPMENT DAMAGE OR EXCESSIVE WEAR ON THE HAMMER AND HAMMER BIT.

- ☑ Be equipped with appropriate attire, hard hat, gloves, safety shoes, eye and ear protection. Don't wear loose clothing that could get caught in the equipment.
- ☑ Safety goggles or safety glasses are required. Rocks, dust, and loose particles from drilling may be blown into the as during drilling. Also, use safety glasses when sharpening bits.
- ☑ Handle all equipment with care.
- ☑ Operating the hammer at extreme pressures or speeds may cause failure or excessive wear. Please follow the instructions in the technical manual and use the recommended procedures for operation and maintenance of the hammer.

- ☑ Compressed air or fluid used for cleaning purposes should be utilized with extreme caution:
 - Do not apply directly to your skin
 - Do not use for cleaning directly from your clothing
 - Do not direct it at another person
 - Be careful not to blow directly into the equipment
 - Wear safety glasses **AT ALL TIMES** of the operation

- ☑ Check the drill rod to power head spindle joint and make sure it is securely tightened before running the rotary head in reverse rotation. If you have a loose connection, it could result in the drill rod becoming disconnected completely. If the drilling rod becomes disconnected, it could strike personnel.

- ☑ Be cautious about getting under the downhole hammer for inspection. The downhole hammer could unexpectedly cycle, forcing the piston to drop out of the downhole hammer. This could cause bodily injury to anyone under the downhole hammer.


- ☑ When using solvents to clean parts, make sure that they are nonflammable, and that it meets current OSHA and International Standards; be sure to use the solvent in a well-ventilated area.

- ☑ Be sure all downhole hammer components are properly lubricated and maintained, while in storage. Failure to follow lubrication recommendations could cause damage and wear to the downhole hammer, its components, and /or personnel injury.

- ☑ Never heat up any parts of the hammer or weld on it. Use extreme care when breaking loose the top and bottom connections, using either a spanner wrench or a flat wrench that properly fits the driver and top sub.

Hammer View and Parts List

Bit Shank DHD380

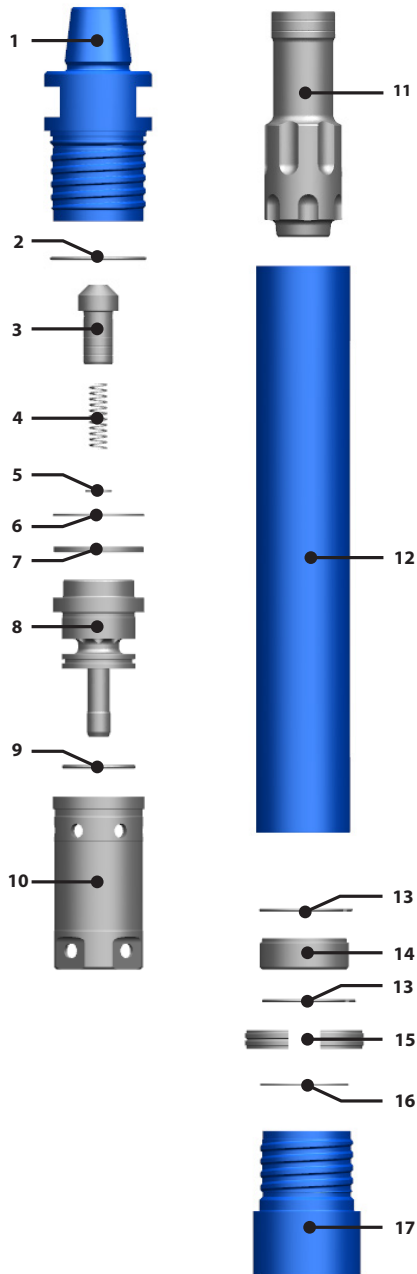


NO	Part Name	Qty	Part Number
1	Top Sub	1	HPDK-A8002
2	Top Sub O-Ring	1	See Sealkit
3	Check Valve	1	HPDK-A8007
4	C.V. Spring	1	HPDK-A8009
5	Choke Set	1	HPDK-A8008
6	Press Ring	1	HPDK-A8023
7	Make Up Ring	1	HPDK-A8006
8	Air Distributor	1	HPDK-A8010-LYT-WGT
9	Air Dis. O-Ring	1	See Sealkit
10	Cylinder	1	HPDK-A8012
11	Piston	1	HPDK-A8014-LYT-WGT
12	Wear Sleeve	1	HPDK-A8001
13	Snap Ring	2	HPDK-A8021
14	Bit Bearing	1	HPDK-A8020
15	Bit Ret. Ring	1	HPDK-A8018
16	Bit Ret. Ring O-Ring	1	See Sealkit
17	Drive Chuck	1	HPDK-A8022
	Sealkit (Items 2, 9, 16)	1	HPDK-A80SEALKIT
	Complete Hammer		HADK-A800I

Dimensions & Weights

Top Sub	4.5" API REG PIN
Eff. Length (in / mm)	51.62 / 1311.1
OD (in / mm)	7.16 / 182
Weight w/o bit (lbs / Kg)	405 / 184
Piston Weight (lbs / Kg)	84 / 38.1

Bit Shank QL80

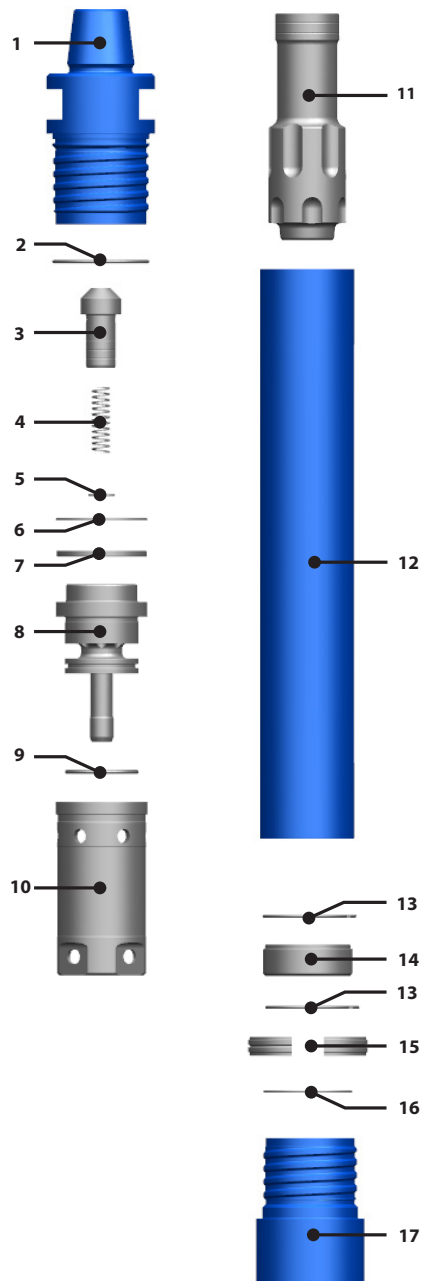


NO	Part Name	Qty	Part Number
1	Top Sub	1	HPDK-A8002
2	Top Sub O-Ring	1	HPDK-A8003
3	Check Valve	1	HPDK-A8007
4	C.V. Spring	1	HPDK-A8009
5	Choke Set	1	HPDK-A8008
6	Press Ring	1	HPDK-A8023
7	Make Up Ring	1	HPDK-A8006
8	Air Distributor	1	HPDK-A8010-Q
9	Air Dis. O-Ring	1	HPDK-A8011
10	Cylinder	1	HPDK-A8012-Q
11	Piston	1	HPDK-A8014-Q
12	Wear Sleeve	1	HPDK-A8001-Q
13	Snap Ring	2	HPDK-A8021
14	Bit Bearing	1	HPDK-A8020-Q
15	Bit Ret. Ring	1	HPDK-A8018-Q
16	Bit Ret. Ring O-Ring	1	HPDK-A8019
17	Drive Sub	1	HPDK-A8022-Q
	Sealkit (Items 2, 9, 16)	1	HPDK-A80SEALKIT
	Complete Hammer		HADK-A80Q

Dimensions & Weights

Top Sub	4 ½" API REG PIN
Eff. Length (in / mm)	50.87 / 1292.0
OD Range (in / mm)	7.16 / 182
Stroke (in / mm)	4.00 / 101.6
Weight w/o bit (lbs / Kg)	405 / 184
Piston Weight (lbs / Kg)	84 / 38

Bit Shank SD8

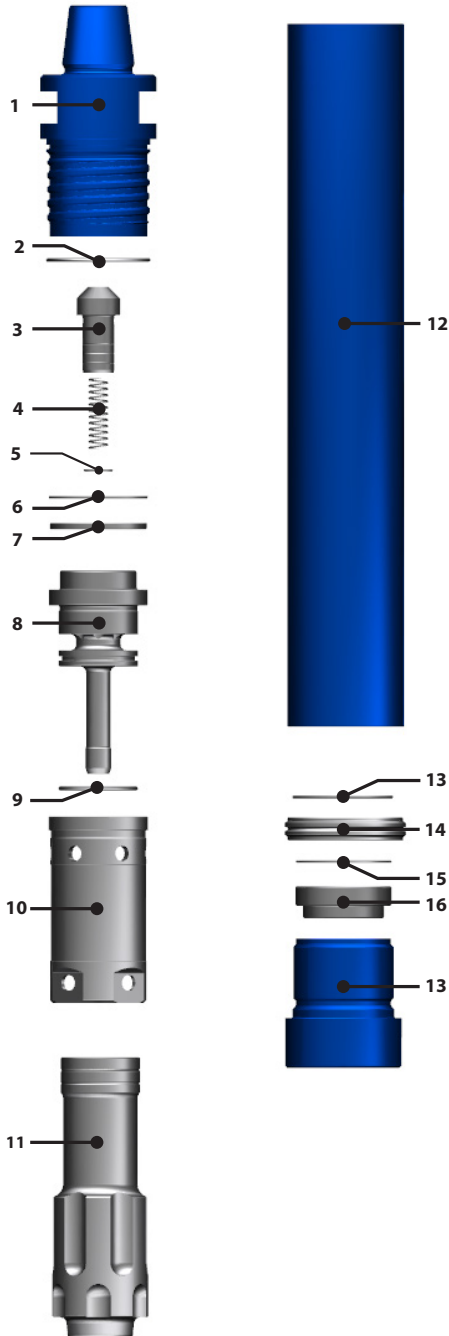


NO	Part Name	Qty	Part Number
1	Top Sub	1	HPDK-A8002
2	Top Sub O-Ring	1	See Sealkit
3	Check Valve	1	HPDK-A8007
4	C.V. Spring	1	HPDK-A8009
5	Choke Set	1	HPDK-A8008
6	Press Ring	1	HPDK-A8023
7	Make Up Ring	1	HPDK-A8006
8	Air Distributor	1	HPDK-A8010-LYT-WGT
9	Air Dis. O-Ring	1	See Sealkit
10	Cylinder	1	HPDK-A8012
11	Piston	1	HPDK-A8014-S-LYT-WGT
12	Wear Sleeve	1	HPDK-A8001-S
13	Snap Ring	1	HPDK-A8021
14	Bit Ret. Ring	1	HPDK-A8018-S
15	Bit Ret. Ring O-Ring	1	See Sealkit
16	Bit Bearing	1	HPDK-A8020-S
17	Drive Sub (Chuck)	1	HPDK-A8022-S
	Sealkit (Items 2, 9, 15)	1	HPDK-A80SEALKIT
	Complete Hammer		HADK-A800S

Dimensions & Weights

Top Sub	4.5" API REG PIN
Eff. Length (in / mm)	50.37 / 1279.3
OD (in / mm)	7.16 / 182
Weight w/o bit (lbs / Kg)	405 / 184
Piston Weight (lbs / Kg)	84 / 38.1

Clamping Locations

HAMMER	LOCATION FROM TOP SUB END OF WEAR SLEEVE "A"	LENGTH OF GRIP AREA "B"	LOCATION FROM DRIVER SUB END OF WEAR SLEEVE "C"	LENGTH OF GRIP AREA "D"
IR3.5	3	4	3	4
IR340	4	4	4	4
QL40	4	4	4	4
SD4	4	4	4	4
IR350	6	4	5	4
QL50	6	4	5	4
SD5	6	4	5	4
IR360	4.5	4	5	4
QL60	4.5	4	4.5	4
SD6	4.5	4	5.5	4
IR380	6.5	4	6	4
QL80	6.5	4	6	4
SD8	6.5	4	6	4
SD10	8	6	6.5	6
IR112	9.5	6	7	6
QL120	9.5	6	7.5	6
SD12	9.5	6	8	6
SD15	9.5	6	8.5	6

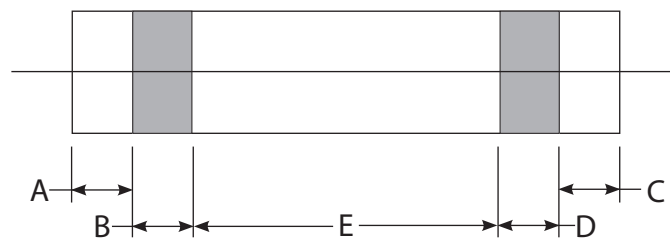

DO NOT USE TONGS
IN AREAS A, C AND E

DK 80 Hammer Air Consumption at Different Working Pressure

PSI	BAR	CFM	CuMtr/Min
150	10.3	620	17.5
250	17.2	1025	29
350	24.1	1580	44.7

In difficult drilling conditions, extra flushing can be obtained by changing the choke in the check valve. This might be desirable, e.g. when there is a large influx of water into the hole, when there is a big difference between the diameter of the drill bit and the diameter of the drill pipes, or when penetration rates are abnormally high.

Friction between the drill pipes and the hole wall can sometimes reduce the penetration rate. Increasing the air pressure to give more impact power and faster penetration can often counteract this.

DK 80 Hammer Assembly

The DK 80 Hammer assembly process is identical to the disassembly process yet in reverse.


The following guideline should be used;

- Assembly process is identical on different shanks except the SD5, which has a slight distinction.
- All parts should be clean and free of grit, dirt, and other foreign material.
- All nicks and burrs on parts should be removed.
- All parts should be coated with rock drill oil & threads with thread grease and preferably the same type to be used on the drilling rig.
- All damaged O-rings' should be replaced. All seals should be oiled or greased to avoid cutting or tearing.
- Make sure the threads are clean and dry, and that sufficient drying time is allowed.


Assembly with Shank type QL80 & DHD380

*The bottom portion of the Case with Shank type QL 80 & DHD 380


1. Insert **Retainer Ring** (Part No. 21) at the first groove into the **Case** (Part No.1)

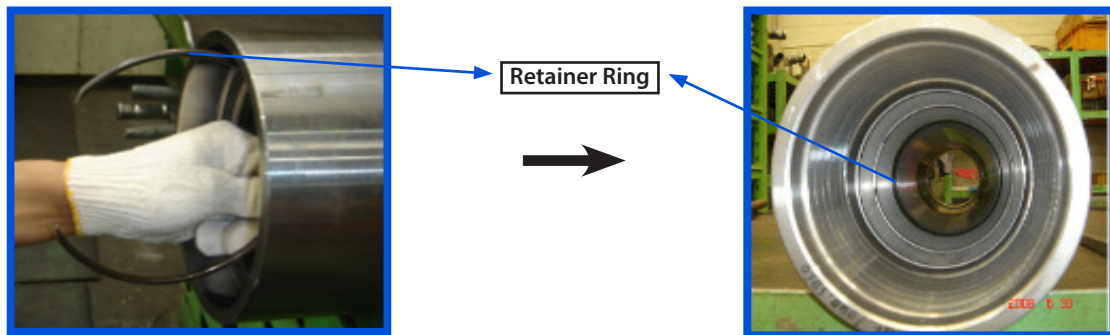


2. Slide the **Bearing** (Part No. 20) into the **Case** (Part No. 1). The bearing may need to be tapped from side to side to fit well.

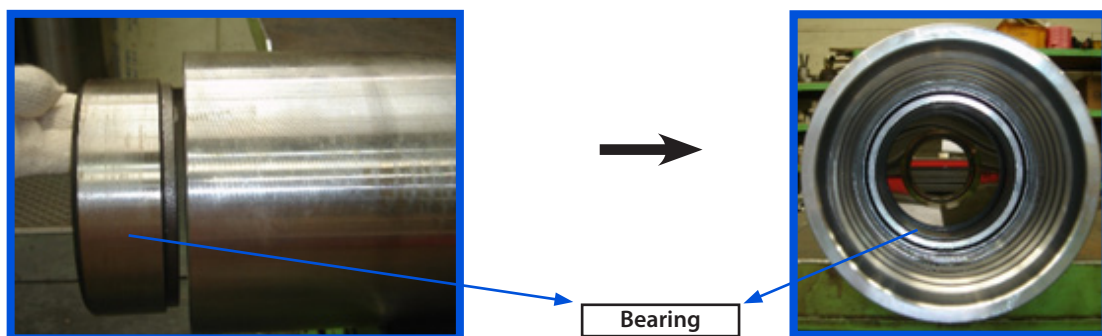

3. Insert Retainer Ring (Part No. 21) at the second groove into the Case (Part No. 1).

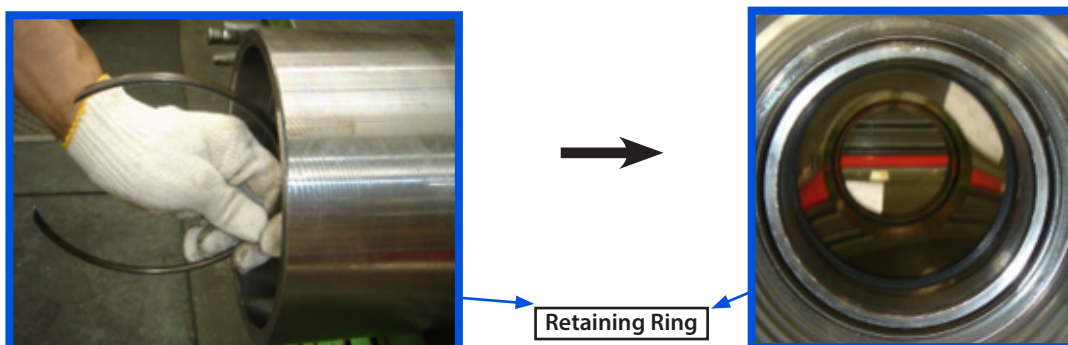


4. Insert the **O-ring** (Part No. 19) at the center groove of the **Bit Retainer Ring** (Part No. 18). And then insert the **Bit Retainer Ring** (Part No. 18) with **O-ring** into the **Case** (Part No. 1).

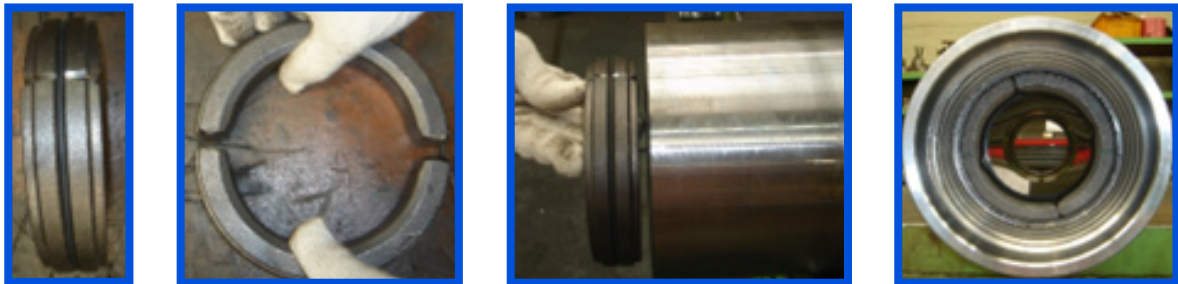

O-Ring

Bit Retainer


5. Screw the **Chuck** (Part No. 22) into the **Case** (Part No. 1) Matching screw line tightly.

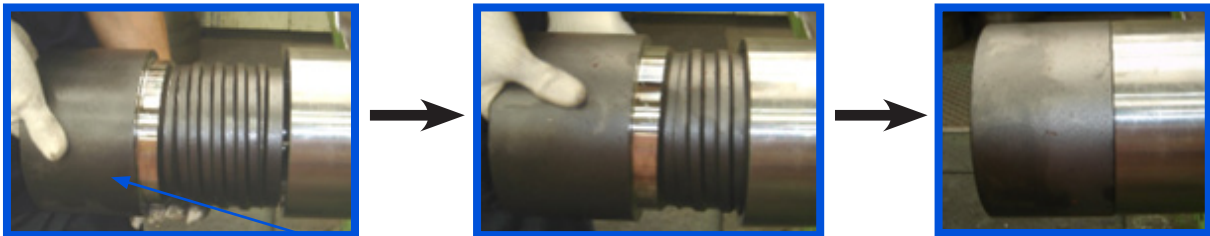

Chuck

* The Upper Portion of the Case.

6. Install the **Piston** (Part No. 14) into the Case (Part No. 1).

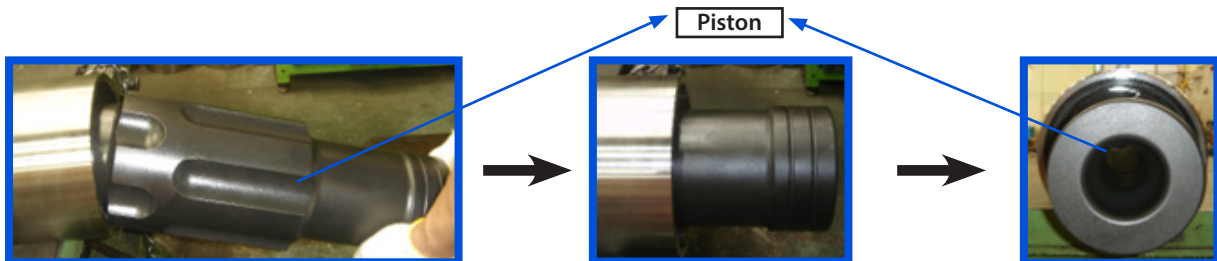

Piston

7. Insert the **O-Ring** (Part No. 11) at the groove of the **Air Distributor** (Part No. 10) and then put the **Air Distributor** (Part No. 10) with the **O-ring** above into the **Cylinder** (Part No. 12).



Cylinder


Air Distributor

O-Ring

8. Put the assembled *Cylinder* (Part No. 12) into the *Case* (Part No. 1).




9. First put *Urethane Make-Up ring* (Part No. 6) and then the *Spacer Ring* (Part No. 5) into case tightly.

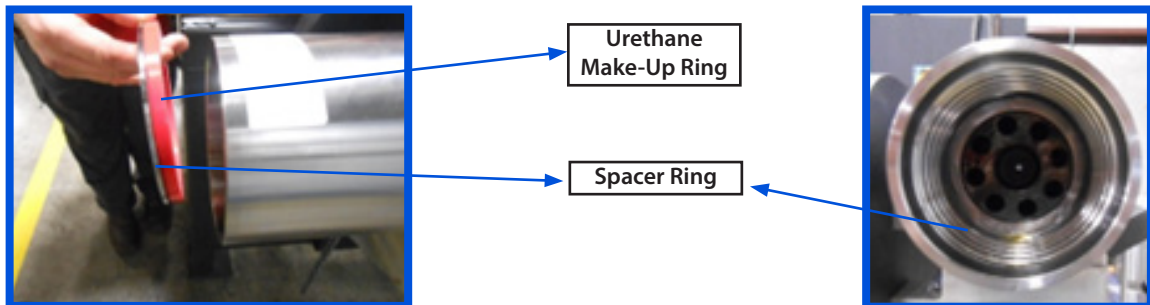

10. Insert the *Spring* (Part No. 9) into the *Check Valve* (Part No. 7) with *Choke* (Part No. 8) and put them into the center of the hole in the case




11. Insert the **O-Ring** (Part No. 3) on the groove of the **Top Sub** (Part No. 2). And then screw the **Top Sub** (Part No. 2) with the **O-Ring** into the top end of the **Case** (Part No. 1).

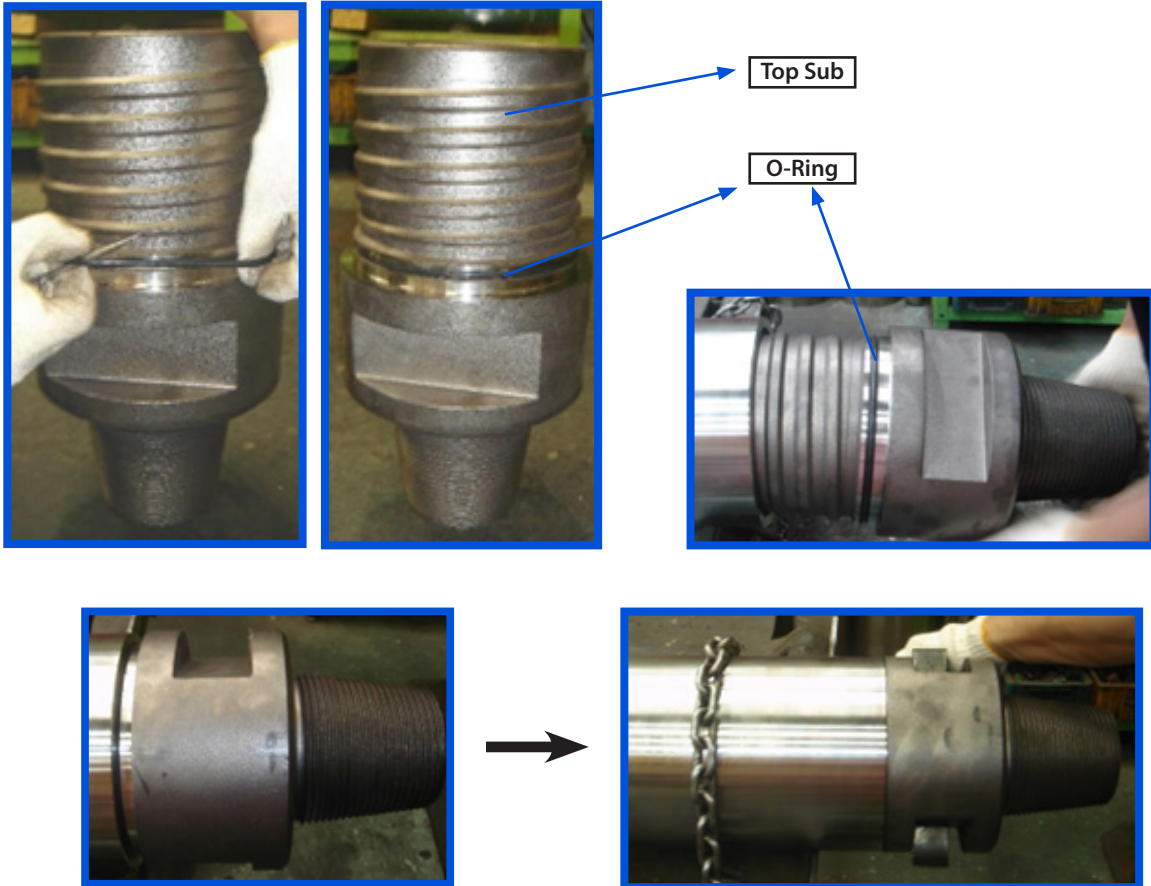


Assembly with Bit


1. Loosen & Screw out the **Chuck** (Part No. 22) from the bottom end of the **Case**. (Part No. 1)
2. Pull out the **Bit Retainer Ring** (Part No. 18) with **O-Ring** (Part No. 19) from the **Case** (Part No.1)

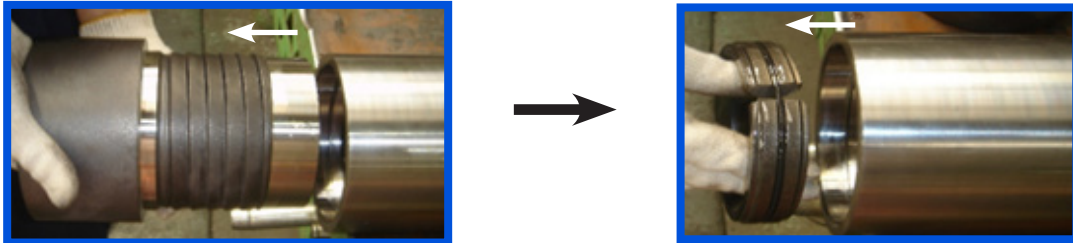

3. Fit down the **Chuck** (Part No. 22) around the bit as shown in the pictures.
4. Put the **Bit Retainer Ring** (Part No. 18) with the O-Ring around the bit as shown in the pictures.

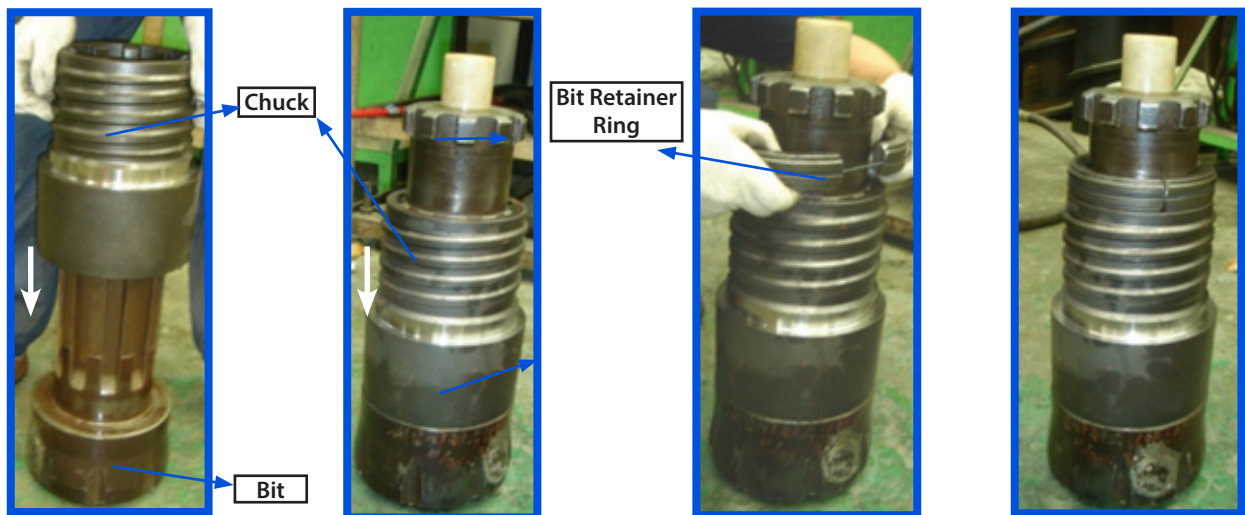


5. Screw the assembled **Chuck** with the **Bit** into the **Case**.

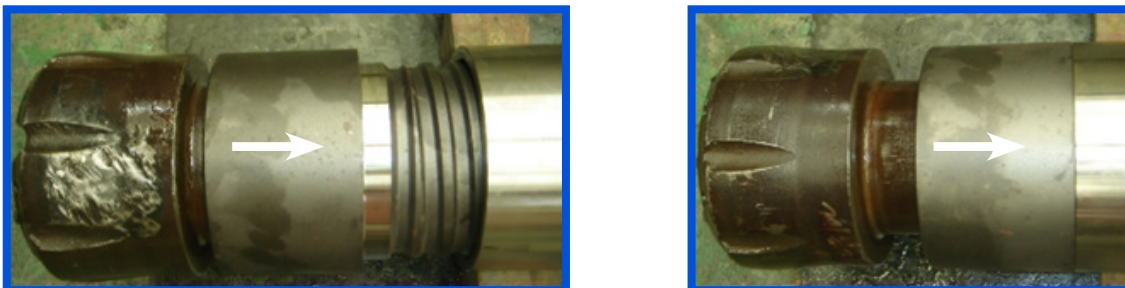


Assembly with Shank type SD8

*The bottom portion of the Case with the Shank type SD6 (Refer to SD6 View & Parts List)


1. Put the **Retainer Ring** (Part No. 21) at the first groove into the **Case** (Part No. 1).

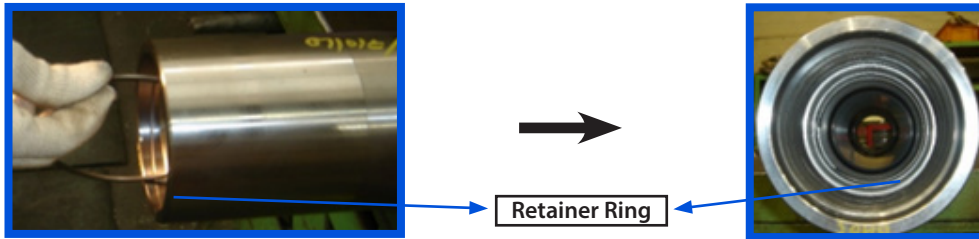

2. Put the **O-Ring** (Part No. 19) at the center groove of the **Bit Retainer Ring** (Part No. 18). And then put the **Bit Retainer Ring** (Part No. 18) with **O-Ring** into the **Case** (Part No. 1).

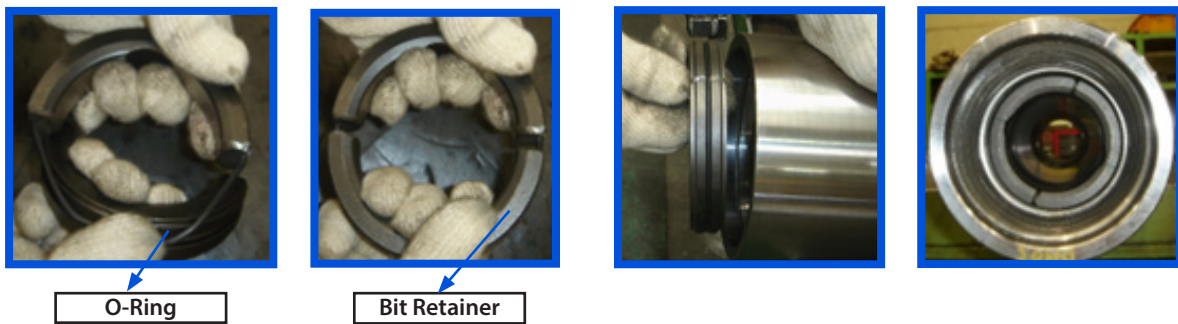

3. Slide the **Bearing** (Part No. 20) into the Case (Part No. 1)
The bearing may need to be tapped from the side to side to fit well.

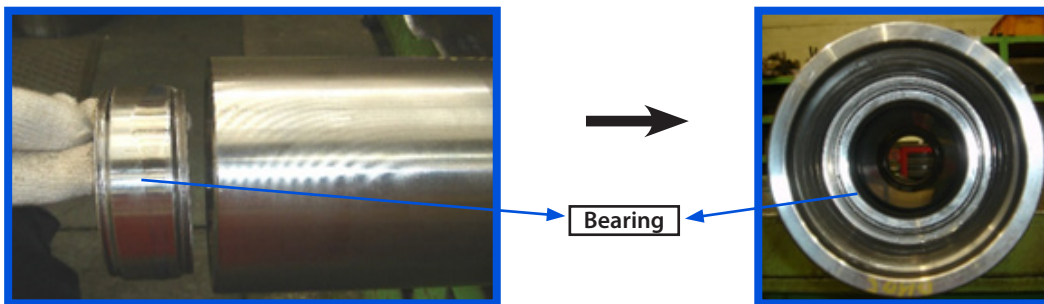


4. Screw the **Chuck** (Part No. 22) into the **Case** (Part No. 1) matching screw line tightly.




*Assembly processing of the upper Case with Shank Type SD8 is the same assembly with Shank Type DHD380 and QL80.

Assembly with Bit

1. Loosen & screw out the **Chuck** (Part No. 22) from the bottom end of the **Case**. (Part No.1).
2. Slide the **Bearing** (Part No. 20) Out of the **Case** (Part No. 1).
3. Pull out the **Bit Retainer Ring** (Part No. 18) with **O-ring** (Part No. 19).
4. Fit down the **Chuck** (Part No. 22) around the **Bit** (Refer to below picture).
5. Fit down **Bearing** (Part No. 20) around the **Bit**.
6. Put **Bit Retainer Ring** (Part No. 18) with **O-ring** around the **Bit**.

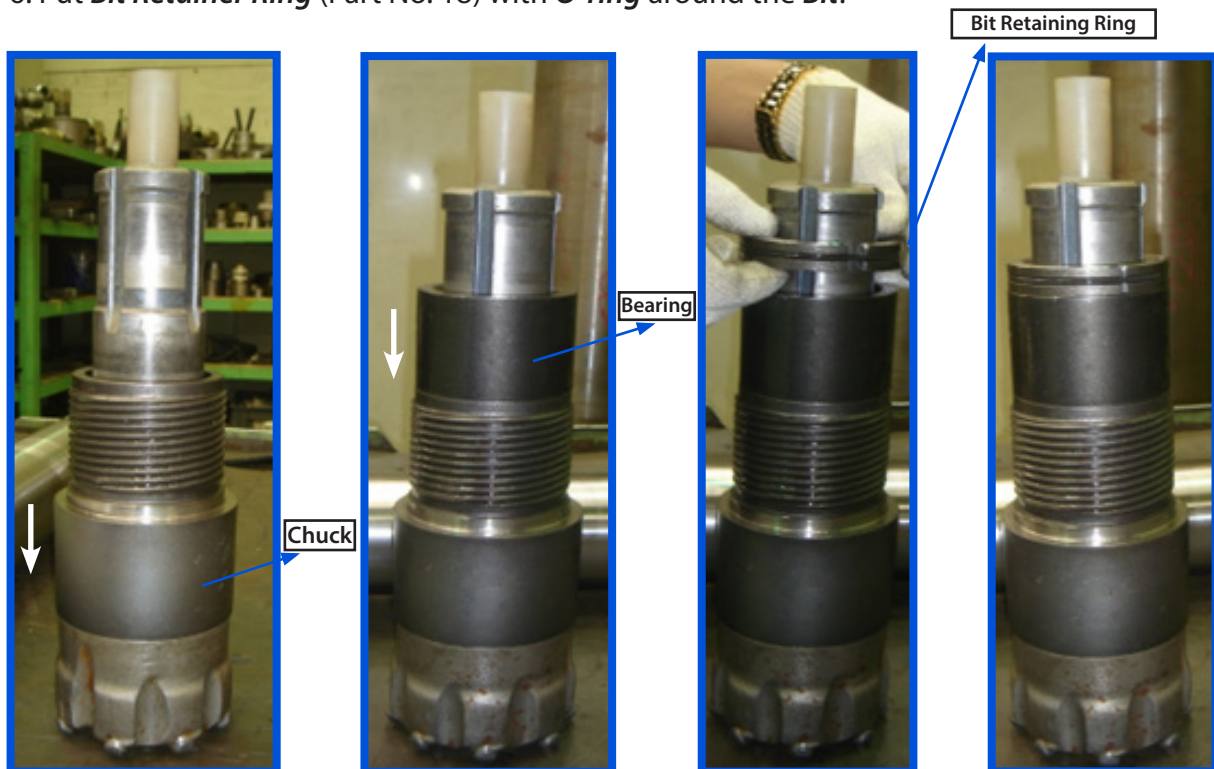

7. Screw the assembled **Chuck** with the **Bit** into the **Case** (Part No. 1).

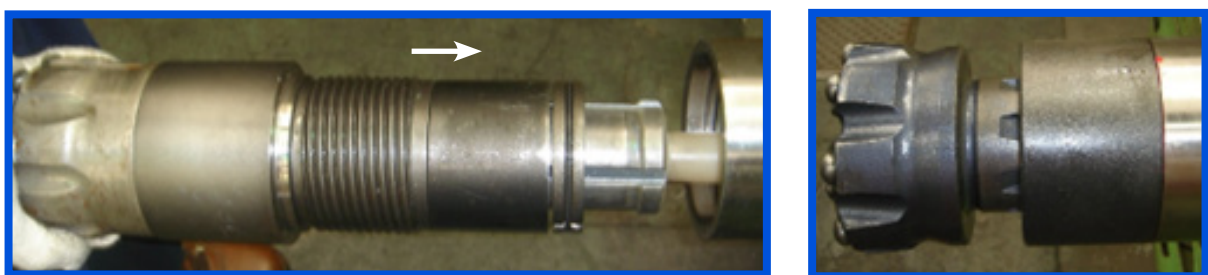

Lubrication

In order to maintain satisfactory operation of the Drill King Hammers, you must lubricate the hammer properly. The recommended lubricant to use with Drill King Hammers is the Biodegradable and Environmentally Friendly **Rock Drill Oil (Part Number DKRDO-5G)**.

- Check the oil level in the lubricating tank
- Check for oil in the compressed air.
- Mineral oils have the best lubricating properties
- Lubricating out used in water well drilling should be non-toxic.

You can make sure the lubricant is being carried to the hammer via the compressed air by placing a plank over the drill steel support and letting the operating air blow over the plank. If you see that it is oily then the oil should be getting to the hammer. It is also essential to the life of the hammer components.

Proper thread lubricants are also critical to the life of the hammer components. Thread lubrication applied to the stress relief grooves at the base pin will help fight the effects of corrosive drilling fluids.

It is a necessary procedure to reapply thread lubricant (Drill King Copper Cote Part No. 630010 1-gal) to the driver sub threads when changing bits. It is also important that the drive sub and the top sub threads be recoated with thread lubricant often in order to assure the maximum protection from corrosion pitting.

Corrosion failures in percussion hammers and hammers bits can be controlled by maintaining a protective barrier between the bit and hammer parts and the environment through proper application of readily available rock drill oils and thread lubricants.

The best method for preventing failures due to corrosion fatigue is to be sure the surface of the bits and components of the hammer is coated with rock drill oil. Threaded connections and thread run out grooves should be protected by coating with thread lubricant. When using water injection, solvable rock drill oil with a higher viscosity rating should be utilized.

Storage

When storing Drill Hammers, it is important to blow the hammer clear of all water. After disassembling the hammer, all internal parts are liberally coated with rock drill oil. Store the hammer horizontally in a clean dry place.

Warranty

NOTICE TO CUSTOMER: READ CAREFULLY, THESE TERMS AND CONDITIONS CONTAIN DISCLAIMERS OF WARRANTIES AND STRICT LIMITATIONS OF LIABILITIES AND REMEDIES. NO WARRANTY IS TRANSFERRABLE WITHOUT THE EXPRESS PERMISSION OF DRILL KING INTERNATIONAL.

Drill King International LP warrants to the original purchaser that its products are free from defects in material and workmanship for a period of:

- Percussion Bits — One year from the date of purchase.
- DTH Hammers — Six months from the date of purchase.
- WAI Hammers — Three months from the date of purchase.

Claims of defects in material and workmanship are subject to review and physical inspection of the returned product. Failure of the purchaser to provide relevant operational details to assist in the investigation will result in the denial of the claim. Until resolution, the purchaser must retain and appropriately store the claim. part. Upon request, the claimed part must be sent to Drill King for assessment. Any part or product sent to Drill King must be accompanied with a "Return Authorization Form" issued, in advance, by the Sales Department at Drill King. All return packaging must clearly be marked with the return authorization number. Freight for the return must be pre-paid by the purchaser. Failure to abide by these instructions will result in refusal to accept the returned product at the Drill King facility.

To begin a warranty claim a 'Product Evaluation Report' must be fully completed and submitted within the above mentioned time frame or warranty life

The report must be completed and submitted within (14) days of either the time of discovery of defect or when reasonable discovery of defect should have been made. Warranty Claims will only be accepted on products still within their warranty life.

Drill King International expressly excludes the following from the terms of this warranty:

- ☑ Incidental or consequential damages connected with the use of their products
- ☑ Claims of parts issued under concession.
- ☑ Claims of lost time
- ☑ Performance outside of the standard scope provided by Drill King International
- ☑ Effects of corrosion and/or normal wear
- ☑ Hammer seals and/or items intended to wear
- ☑ Any part that shows evidence of improper application
- ☑ Fitness for use other than the intended purposes of the product
- ☑ Proprietary design where the design control is retained by the customer, particularly when design parameters are outside Drill King Internationals recommended specifications (E.X. Oversized bits or hole openers.)
- ☑ Evidence of abuse, localized heating, welding, galling, corrosion, inadequate lubrication, physical alteration, wrench marks, lack of proper maintenance, operating outside recommended specifications, bending or otherwise distorting, excessive wear, improper storage or transportation, and chipped or crushed carbides must result in denial of claims
- ☑ Damage caused as a result of using incorrect servicing tools or procedures
- ☑ Evidence from wear shows the product has achieved at least 75% of its expected life.
- ☑ Any part that is described as "No Warranty" in the quote, order acknowledgement, order, packing list, or invoice
- ☑ Special warranties described in the quote, order acknowledgement, order, packing list, or invoice

Conclusion

In the event of finding a defective product, a full or pro-rated credit will be issued provided that the end user has demonstrated that the product has been stored, installed, maintained and operated in an acceptable manner.

Drill King International will not accept any remedies to the user other than those set out under the provisions of the warranty above. **Drill King international will only ever be liable for damages that are liquidated and set at the original purchase price for any said item or part in dispute**



CONTACT US

Phone: 1-817-539-2500

Fax: 1-817-453-1263

Toll Free: 1-866-900-BITS (2487)

Email: sales@drillking.com

Skype ID: drill.king

Drill King International
820 S 6th Ave, Mansfield, TX 76063, USA.

drillking.com